

MEXE02 波形モニタ機能 項目一覧

BLEシリーズ RS-485通信タイプ

「No.」は信号を選択するときに表示される順番です。

■CH1,2

No.	信号名
1	指令速度[r/min]
2	検出速度[r/min]

■CH3,4

No.	信号名	No.	信号名
1	ALARM-OUT1	51	R13
2	ALARM-OUT2	52	R14
3	ALARM-RESET	53	R15
4	DIR	54	REV
5	EXT-ERROR	55	S-BSY
6	FWD	56	SPEED-OUT
7	HMI	57	STOP-MODE
8	INO	58	TH
9	IN1	59	TL
10	IN2	60	TLC
11	IN3	61	VA
12	IN4	62	WNG
13	IN5		
14	IN6		
15	M0		
16	M1		
17	M2		
18	M3		
19	MB-FREE		
20	MOVE		
21	MPS		
22	NET-IN0		
23	NET-IN1		
24	NET-IN2		
25	NET-IN3		
26	NET-IN4		
27	NET-IN5		
28	NET-IN6		
29	NET-IN7		
30	NET-IN8		
31	NET-IN9		
32	NET-IN10		
33	NET-IN11		
34	NET-IN12		
35	NET-IN13		
36	NET-IN14		
37	NET-IN15		
38	R0		
39	R1		
40	R2		
41	R3		
42	R4		
43	R5		
44	R6		
45	R7		
46	R8		
47	R9		
48	R10		
49	R11		
50	R12		