

MEXE02 波形モニタ機能 項目一覧

PKAシリーズ 位置決め機能内蔵タイプ

「No.」は信号を選択するときに表示される順番です。

■CH1,2

No.	信号名
1	指令速度[Hz]

■CH3,4

No.	信号名	No.	信号名	No.	信号名
1	+JOG	51	MS4	101	WNG
2	+JOG_R	52	MS4_R		
3	+LS	53	MS5		
4	+LS_R	54	MS5_R		
5	-JOG	55	NET-IN0		
6	-JOG_R	56	NET-IN1		
7	-LS	57	NET-IN2		
8	-LS_R	58	NET-IN3		
9	ALM	59	NET-IN4		
10	ALM-RST	60	NET-IN5		
11	AREA1	61	NET-IN6		
12	AREA2	62	NET-IN7		
13	AREA3	63	NET-IN8		
14	AWO	64	NET-IN9		
15	AWO_R	65	NET-IN10		
16	FREE	66	NET-IN11		
17	FREE_R	67	NET-IN12		
18	FWD	68	NET-IN13		
19	FWD_R	69	NET-IN14		
20	HMI	70	NET-IN15		
21	HOME	71	P-PRESET		
22	HOME_R	72	R0		
23	HOME-P	73	R1		
24	HOMES	74	R2		
25	HOMES_R	75	R3		
26	IN0	76	R4		
27	IN1	77	R5		
28	IN2	78	R6		
29	IN3	79	R7		
30	M0	80	R8		
31	M0_R	81	R9		
32	M1	82	R10		
33	M1_R	83	R11		
34	M2	84	R12		
35	M2_R	85	R13		
36	M3	86	R14		
37	M3_R	87	R15		
38	M4	88	READY		
39	M4_R	89	RVS		
40	M5	90	RVS_R		
41	M5_R	91	S-BSY		
42	MOVE	92	SLIT		
43	MS0	93	SLIT_R		
44	MS0_R	94	SSTART		
45	MS1	95	SSTART_R		
46	MS1_R	96	START		
47	MS2	97	START_R		
48	MS2_R	98	STOP		
49	MS3	99	STOP_R		
50	MS3_R	100	TIM		